



SCHEDA ATTREZZATURA PER MANUTENZIONE POMPE SERIE 51 - ALBERO MASCHIO
MAINTENANCE TOOL CHART FOR PUMPS 51 SERIES - MALE SHAFT

PARTICOLARE DA SOSTITUIRE <i>PART TO REPLACE</i>		ATTREZZO ESTRAZIONE <i>REMOVING TOOL</i>			ATTREZZO INSERIMENTO <i>INSERTION TOOL</i>		
CODICE <i>PART NO.</i>	DESCRIZIONE <i>DESCRIPTION</i>	CODICE <i>PART NO.</i>	DESCRIZIONE <i>DESCRIPTION</i>	UTILIZZARE CON <i>USE WITH</i>	CODICE <i>PART NO.</i>	DESCRIZIONE <i>DESCRIPTION</i>	UTILIZZARE CON <i>USE WITH</i>
90156500	OIL SEAL D. 15x24x5				26242200	OIL SEAL INSERTION TOOL	
90357200	OR Ø5,28x1,78 (2021)				26242300	O-RING MOUNTING GUIDE	
90261800	PACKING D. 15x25x5/3,1 P.	26407400	PACKING EXTRACTION SOCKET D.15	USE WITH EXTRACTOR 26019400	26242400	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26242500
90262000	PACKING D. 15x25x5/3,1 H.P.	26407400	PACKING EXTRACTION SOCKET D.15	USE WITH EXTRACTOR 26019400	26242400	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26242500
90268100	PACKING D. 18x26x5/3 H.P.	27124900	PACKING EXTRACTION SOCKET D.18	USE WITH EXTRACTOR 26019400	27508100	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26242500
90163400	OIL SEAL D. 25x42x7				26083300	OIL SEAL INSERTION TOOL	