



**SCHEDA ATTREZZATURA PER MANUTENZIONE POMPE SERIE 66 HT - SS**  
**MAINTENANCE TOOL CHART FOR PUMPS 66 HT- SS SERIES**

<b>PARTICOLARE DA SOSTITUIRE</b> <i>PART TO REPLACE</i>		<b>ATTREZZO ESTRAZIONE</b> <i>REMOVING TOOL</i>			<b>ATTREZZO INSERIMENTO</b> <i>INSERTION TOOL</i>		
<b>CODICE</b> <i>PART NO.</i>	<b>DESCRIZIONE</b> <i>DESCRIPTION</i>	<b>CODICE</b> <i>PART NO.</i>	<b>DESCRIZIONE</b> <i>DESCRIPTION</i>	<b>UTILIZZARE CON</b> <i>USE WITH</i>	<b>CODICE</b> <i>PART NO.</i>	<b>DESCRIZIONE</b> <i>DESCRIPTION</i>	<b>UTILIZZARE CON</b> <i>USE WITH</i>
90162500	OIL SEAL D. 22x32x5,5				27385000	OIL SEAL INSERTION TOOL	
90269200	PACKING D. 20x30x10 H.P.	26093400	PACKING EXTRACTION SOCKET D.20	USE WITH EXTRACTOR 26019400	27396300	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 27385200
90271700	PACKING D. 22x32x10 H.P.	26093500	PACKING EXTRACTION SOCKET D.22	USE WITH EXTRACTOR 26019400	27385100	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 27385200
90274100	PACKING D. 24x34x10 H.P.	26093600	PACKING EXTRACTION SOCKET D.24	USE WITH EXTRACTOR 26019400	27396400	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 27385200
90164800	OIL SEAL D. 30x55x7				26083600	OIL SEAL INSERTION TOOL	