



**SCHEDA ATTREZZATURA PER MANUTENZIONE POMPE SERIE 70 KE**  
**MAINTENANCE TOOL CHART FOR PUMPS 70 KE SERIES**

| <b>PARTICOLARE DA SOSTITUIRE</b><br><i>PART TO REPLACE</i> |  | <b>ATTREZZO ESTRAZIONE</b><br><i>REMOVING TOOL</i> |  |  | <b>ATTREZZO INSERIMENTO</b><br><i>INSERTION TOOL</i> |  |  |
|--|--|--|--|--|--|--|--|
| <b>CODICE</b><br><i>PART NO.</i>                           | <b>DESCRIZIONE</b><br><i>DESCRIPTION</i> | <b>CODICE</b><br><i>PART NO.</i>                   | <b>DESCRIZIONE</b><br><i>DESCRIPTION</i> | <b>UTILIZZARE CON</b><br><i>USE WITH</i> | <b>CODICE</b><br><i>PART NO.</i>                     | <b>DESCRIZIONE</b><br><i>DESCRIPTION</i> | <b>UTILIZZARE CON</b><br><i>USE WITH</i> |
| 90167700   | OIL SEAL D. 36x47x7                      | 27503800   | OIL SEAL EXTRACTION SOCKET               | USE WITH EXTRACTOR 26019400              | 27904200   | OIL SEAL INSERTION TOOL                  |  |
| 90270500   | PACKING D. 20x35x7,5/4,5 H.P.            | 26093400   | PACKING EXTRACTION SOCKET Ø20            | USE WITH EXTRACTOR 26019400              | 27465600   | PACKING INSERTION GUIDE                  | USE WITH DRIVE STUD 26134600             |
| 90272500   | PACKING D. 22x35x7/4,5 H.P.              | 26093500   | PACKING EXTRACTION SOCKET Ø22            | USE WITH EXTRACTOR 26019400              | 27465600   | PACKING INSERTION GUIDE                  | USE WITH DRIVE STUD 26134600             |
| 90274500   | PACKING D. 24x35x6/4 H.P.                | 26093600   | PACKING EXTRACTION SOCKET Ø24            | USE WITH EXTRACTOR 26019400              | 27465600   | PACKING INSERTION GUIDE                  | USE WITH DRIVE STUD 26134600             |
| 90275800   | PACKING D. 28x45x8,5/5 H.P.              |  |  |  | 27465700   | PACKING INSERTION GUIDE                  | USE WITH DRIVE STUD 26406300             |
| 90277000   | PACKING D. 30x45x7,5/4,5 H.P.            |  |  |  | 27465700   | PACKING INSERTION GUIDE                  | USE WITH DRIVE STUD 26406300             |
| 36203866   | VALVE SEAT                               | 27513700   | VALVE EXTRACTION PLUG                    | USE WITH EXTRACTOR 26019400              |  |  |  |
| 70211570   | VALVE SEAT                               | 26019400   | EXTRACTOR                                |  |  |  |  |
| 90166800   | OIL SEAL D. 35x52x7                      |  |  |  | 27904500   | OIL SEAL INSERTION TOOL                  |  |