



**SCHEDA ATTREZZATURA PER MANUTENZIONE POMPE SERIE 71 HT - 71 SS**  
**MAINTENANCE TOOL CHART FOR PUMPS 71 HT - 71 SS SERIES**

<b>PARTICOLARE DA SOSTITUIRE</b> <i>PART TO REPLACE</i>		<b>ATTREZZO ESTRAZIONE</b> <i>REMOVING TOOL</i>			<b>ATTREZZO INSERIMENTO</b> <i>INSERTION TOOL</i>		
<b>CODICE</b> <i>PART NO.</i>	<b>DESCRIZIONE</b> <i>DESCRIPTION</i>	<b>CODICE</b> <i>PART NO.</i>	<b>DESCRIZIONE</b> <i>DESCRIPTION</i>	<b>UTILIZZARE CON</b> <i>USE WITH</i>	<b>CODICE</b> <i>PART NO.</i>	<b>DESCRIZIONE</b> <i>DESCRIPTION</i>	<b>UTILIZZARE CON</b> <i>USE WITH</i>
90167800	OIL SEAL D. 38x52x7	27503900	OIL SEAL EXTRACTION SOCKET	USE WITH EXTRACTOR 26019400	27904900	OIL SEAL INSERTION TOOL	
90246000	PACKING D. 40x55x10 H.P.				27473100	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 27356300
90245000	PACKING D. 40x46,15 L.P.				27471200	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26406300
36207256	VALVE SEAT SS	27516900	VALVE SEAT EXTRACTION PLUG	USE WITH EXTRACTOR 26019400			
36204156	VALVE SEAT HT	27516900	VALVE SEAT EXTRACTION PLUG	USE WITH EXTRACTOR 26019400			
90170000	OIL SEAL D. 50x65x8				27904800	OIL SEAL INSERTION TOOL	
71223766	VALVE CAP SS	27513600	PLUG M10-M16 FOR EXTRACTOR	USE WITH EXTRACTOR 26019400			
71211170	VALVE CAP HT	27513600	PLUG M10-M16 FOR EXTRACTOR	USE WITH EXTRACTOR 26019400			
	INLET VALVE ASSY.	27513600	PLUG M10-M16 FOR EXTRACTOR	USE WITH EXTRACTOR 26019400			
	OUTLET VALVE ASSY	27513600	PLUG M10-M16 FOR EXTRACTOR	USE WITH EXTRACTOR 26019400			